

Using the flexible tube, treat the following areas.

Bonnet.

Treat frame cavity around periphery.



Bonnet hinge reinforcement.

Treat area below bonnet hinge reinforcement. Access through cavity below bonnet hinge, behind plenum finisher.



'A' Post lower.

Access through hole adjacent to courtesy light switch. Remove blanking plug. Feed tube down into cavity to full extent. Withdraw tube whilst spraying. Feed tube upwards into cavity and re-apply. Wipe off excess product from painted surfaces. Coat new plug with product prior to fitting.



Front floor extension.

Carefully remove the front door primary seal adjacent to the treadplate. Remove the three screws which attach the front door treadplate to the floor. Lift the carpet, noting it's fitting around the centre division. Move the carpet to allow access to the blanking plug and retain for refitting. Feed tube forwards into cavity to full extent. Withdraw tube whilst spraying. Feed tube rearwards to full extent and re-apply. Re-fit blanking plug. Replace carpet, paying particular attention to fitting around / below centre division. Re-fit treadplate using three fixing screws. Take care to avoid piercing electrical wiring harness. Replace primary door seal, ensuring seal is pushed fully onto body flange.

